


# Measuring Tapes

for measuring plane-parallel distances and for inside circumference and diameter of cylindrical parts

CJL/IUB/NO



SERIES 622-624

## MEASURING TAPE CJL


Length measuring tape CJL for measuring plane-parallel distances

graduation dist. 1 mm; w. vernier 0,1 mm; laserscaled, stainless steel. Tape width: 16 mm.

### BANDMAB CJL

Type	Meas. range Distance [mm]	Art.-No.
CJL 950	60 - 950	622 00076
CJL 2200	900 - 2200	622 00077
CJL 3460	2200 - 3460	622 00078
CJL 4720	3400 - 4720	622 00079
CJL 6000	4700 - 6000	622 00080

Larger measuring ranges on inquiry

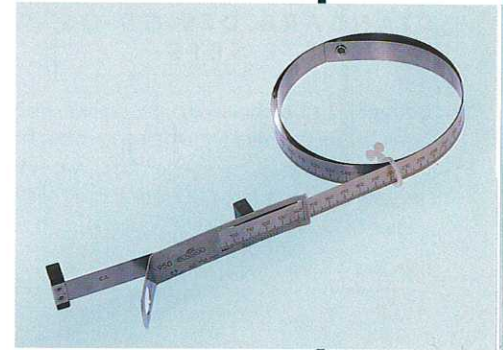

Length measuring tape CJL

## INSIDE CIRCUMFERENCE TAPE IUB


Measuring tape for determining the inside circumference and average diameter of round, oval or constant polygonal bores.

Graduation distance 1 mm with vernier 0,1 mm, laserscaled, stainless steel; The tape is put against the inside bore wall with the help of clamping nippers. Tape width: 20 mm.

### CIRCUMFERENCE TAPE IUB

Circumference range [mm]	Diameter range [mm]	Type	Art.-No.
<i>Clamping nippers for IUB (needed only once); for all tape ranges</i>			623 00016
720 - 1550	230 - 490	IUB 1550	623 00012
940 - 2200	300 - 700	IUB 2200	623 00013
2190 - 3620	700 - 1100	IUB 3620	623 00014
3450 - 4720	1100 - 1500	IUB 4720	623 00015
4710 - 5980	1500 - 1900	IUB 5980	623 00071
5970 - 7230	1900 - 2300	IUB 7230	623 00086
7220 - 8500	2300 - 2700	IUB 8500	623 00087

Larger measuring ranges on inquiry

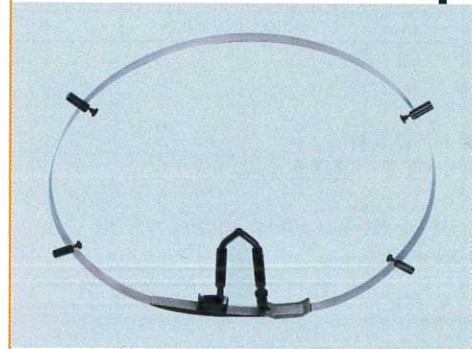

Inside circumference tape IUB with clamping nippers

## NOVOMETER

Contour measuring instrument for determining the average inside diameter of round, oval or constant polygonal bores, with scaled ring and vernier. Tape width: 20 mm.

Digital Novometer: with resolution 0,01 mm; recording of measuring values through interface RS 232 or RS 485 also for SPC-Systems; Digital display for  $\varnothing$  or circumference. Individual meas. range.

### CONTOUR GAUGE NOVOMETER

Diameter range [mm]	Reading [mm]	Art.-No.
14 - 24	0,1	624 00017
22 - 40	0,1	624 00018
35 - 60	0,1	624 00019
55 - 100	0,1	624 00020
95 - 180	0,1	624 00021
170 - 255	0,1	624 00022
245 - 330	0,1	624 00070
Spare tape for Novometer	0,1	624 00085

Option: Sliding clutch for reproducible measuring force with elastic work pieces

on inquiry

Digital Novometer on inquiry



Contour Gauge Novometer



Digital Novometer

Inspection Certificates for SCHWENK measuring tapes see page 33